

RH TEEN

KITSON DRESSER



WARNING : ADULT ASSEMBLY ONLY OWING TO THE PRESENCE OF SMALL PARTS, SHARP POINTS AND EDGES

WARNING






Young children may be injured by tipping furniture so proper installation of the mounting hardware for this item is highly recommended. When properly installed, this mounting hardware could provide protection against the unexpected tipping of the furniture piece. This product is only a deterrent. It is not a substitute for proper adult supervision.

CARE INSTRUCTIONS

1. Dust often using a clean, soft, dry lint-free cloth.
2. Blot spills immediately.
3. We do not recommend the use of chemical cleansers, abrasives, or furniture polish.

TOOLS NEEDED

Phillips head screwdriver (not included)

NO.	ITEM	DESCRIPTION	QTY.
1		Screw 1 1/2"	4 pcs.
2		Screw 5/8"	4 pcs.
3		Nylon Strap	2 pc.
4		Bracket	4 pcs.
5		Ring	4 pcs.

FURNITURE TIPPING RESTRAINT INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

1. Determine the final position of the furniture piece.
2. Attach two of the mounting brackets with rings (preferably approx 6" from each side) near the top back edge of the furniture piece by inserting shorter screws. See Figure 1 below.
3. Determine the final position of the furniture piece. Drill starter holes into the wall stud at the level of the brackets on the furniture piece. Always attach to stud wherever possible. Fix the bracket with ring to the wall stud using 1 1/2" screws. See Figure 2 below.
4. Move the furniture piece in line with the brackets installed on the wall.
5. Lace one end of the nylon restraint strap through each ring. Bring both ends together and slide the beaded end until it snap locks into the keyhole slot. See Figure 3 & 4 below.
6. Check to make sure that the straps are securely laced and locked to the brackets.

