

RH TEEN


TEXTURED METAL SWING-ARM SCONCE – ASSEMBLY INSTRUCTIONS

PARTS ENCLOSED:

- | | |
|----------------------------|----------------------|
| (A) Wall Anchors (2) | (H) Plate Screws (4) |
| (B) Mounting Plate (1) | (I) Back Plate (1) |
| (C) Wall Screws (2) | (J) LED Bulb (1) |
| (D) Top Cord Cover (1) | (K) Arm Knob (1) |
| (E) Electrical Cord (1) | (L) Shade Joint (1) |
| (F) Bottom Cord Cover (1) | (M) Arm Handle (1) |
| (G) ON/OFF Rotating Switch | |

TEXTURED METAL SWING-ARM SCONCE

Plug-In Installation

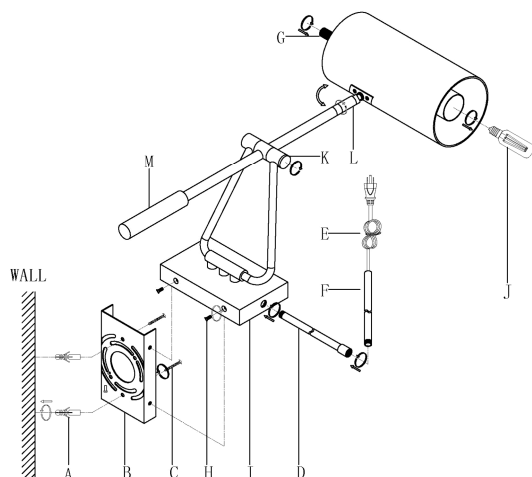

IMPORTANT SAFETY INSTRUCTIONS:

The fixture can be used as a plug-in or a fixed unit when used with the appropriate conversion kit. For your safety, this sconce is equipped with a 3-pronged polarized plug. If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for up to (1) 4w max Type T LED bulb (included) or (1) 40w max Type T incandescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until the sconce is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing lightbulb.

Do not touch bulb when fixture is turned on or look directly at lit bulb.
Keep flammable materials away from lit bulb.

DO NOT REMOVE THE CARDBOARD INSULATOR SURROUNDING THE SOCKET.
THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.



WARNING: STRANGULATION HAZARD

Keep cord at least 3 feet away from cribs, bassinets, and toddler beds.
Keep out of reach of children under 3 years of age.

PLUG-IN ASSEMBLY INSTRUCTIONS:

1. Carefully remove all parts from the box and remove all plastic coverings.
2. Drill 2 holes in the wall that align with the holes on the mounting plate (B) of the fixture and insert wall anchors (A).
3. Place mounting plate (B) onto the wall anchors (A), then screw wall screws (C) into anchors.
4. Attach the back plate (I) to the mounting plate (B) and use the plate screws (H) to secure.
5. Screw the top cord cover (D) into the hole located on the bottom of the back plate (I).
6. Screw the bottom cord cover (F) into the top cord cover (D).
7. Insert (1) LED bulb (J) into the threaded socket.
8. Adjust the shade with shade joint (L) using arm knob (K) and arm handle (M) to get the desired angle and height. Follow these steps to adjust the knob:
 - A. To adjust the position of the arm, lift up the arm handle to loosen the arm knob.
 - B. After loosening the arm knob, adjust the arm to the desired angle, then tighten the knob. You don't need to tighten the knob with much force; just push the arm handle down a little to hold the lamp in position.
9. Plug electrical cord (E) into proper electrical outlet and rotate ON/OFF switch (G) to test fixture.

CARE INSTRUCTIONS:

To clean, use a soft, dry cloth only.

Do not use polishes or cleaners on the fixture.

RHTEEN


TEXTURED METAL SWING-ARM SCONCE – ASSEMBLY INSTRUCTIONS

PARTS ENCLOSED:

- | | |
|---------------------------------|---------------------|
| (A) Ground Wire Screw (1) | (H) Back Plate (1) |
| (B) Mounting Plate (1) | (I) LED Bulb (1) |
| (C) Mounting Plate Screws (2) | (J) Arm Knob (1) |
| (D) Thread Plug Screw (1) | (K) Shade Joint (1) |
| (E) ON/OFF Rotating Switch (1) | (L) Arm Handle (1) |
| (F) Plate Screws (4) | |
| (G) Plastic Wire Connectors (3) | |

TEXTURED METAL SWING-ARM SCONCE

Direct-Wire Installation

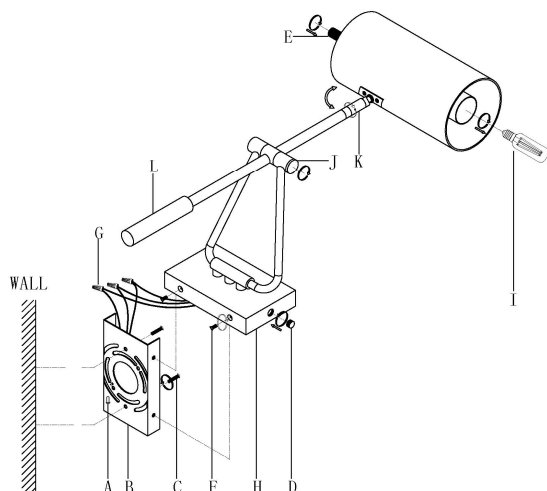

IMPORTANT SAFETY INSTRUCTIONS:

The fixture can be used as a plug-in or a fixed unit when used with the appropriate conversion kit. For your safety, this sconce is equipped with a 3-pronged polarized plug. If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.

This fixture has been rated for up to (1) 4w max Type T LED bulb (included) or (1) 40w max Type T incandescent bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNINGS:

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until the sconce is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, turn off and unplug lamp and allow it to cool prior to replacing lightbulb.

Do not touch bulb when fixture is turned on or look directly at lit bulb. Keep flammable materials away from lit bulb.

DO NOT REMOVE THE CARDBOARD INSULATOR SURROUNDING THE SOCKET. THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

DIRECT-WIRE ASSEMBLY INSTRUCTIONS:

1. Carefully remove all parts from the box and remove all plastic coverings.
2. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX / CIRCUIT BREAKER.
3. Cut the plug from the end of the electrical cord. From the back side of the fixture, pull the electrical cord through the exit hole at the bottom of the back plate. Then thread plug screw (D) into the hole vacated by the cord.
4. Cut the cord to the desired length (at least 6" from the back plate) to make a "J BOX" connection.
5. Guide the wiring from the outlet box through the center hole in the mounting plate (B).
6. Attach the mounting plate (B) to the outlet box using the mounting plate screws (C) to secure.
7. Attach the ground wire (usually green or bare wire) from the fixture to the ground junction box wire from the outlet box (usually green or bare wire). Or wrap the ground wire around the green ground wire screw (A).
8. Connect the hot wire to the hot junction box wire (usually black) with a wire connector (G) and wrap the connection with electrical tape. Connect the neutral wire to the neutral junction box wire (usually white) with a plastic wire connector (G) and wrap the connection with electrical tape.
9. Attach the back plate (H) to the mounting plate (B) and use the plate screws (F) to secure the back plate.
10. Insert (1) LED bulb (I) into the threaded socket.
11. Adjust the shade with shade joint (K) using arm knob (J) and arm handle (L) to get the desired angle and height. Follow these steps to adjust the knob:
A. To adjust the position of the arm, lift up the arm handle to loosen the arm knob.
B. After loosening the arm knob, adjust the arm to the desired angle, then tighten the knob. You don't need to tighten the knob with much force; just push the arm handle down a little to hold the lamp in position.
12. Restore power to the junction box and rotate ON/OFF switch (E) to test fixture.
13. Installation is complete.

CARE INSTRUCTIONS:

To clean, use a soft, dry cloth only.
Do not use polishes or cleaners on the fixture.