





RHTEEN




ANAYA FULL BED INSTRUCTIONS

PARTS ENCLOSED:

- A [1] HEADBOARD
- B [2] HEADBOARD FOOT
- C [2] SIDE RAIL
- D [1] FOOTBOARD
- E [15] SLAT ROLL
- F [8] SLAT FOOT (WITH ADJUSTABLE GLIDE)

NO.	ITEM	DESCRIPTION	QTY
1		Screw (3.8cm)	8 Pcs.
2		Allen Key (0.5 cm.)	1 Pc.
3		Allen Head Bolt (0.8 cm. Dia)	12 Pcs.
4		Screw (3 cm.)	30 Pcs.

Philips Screwdriver (not included)

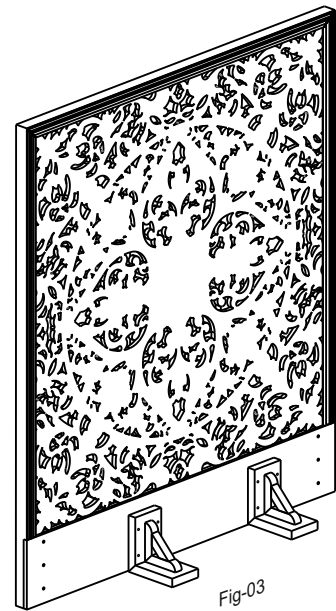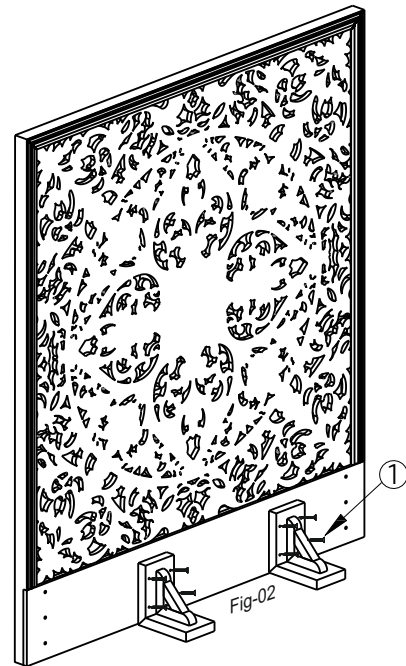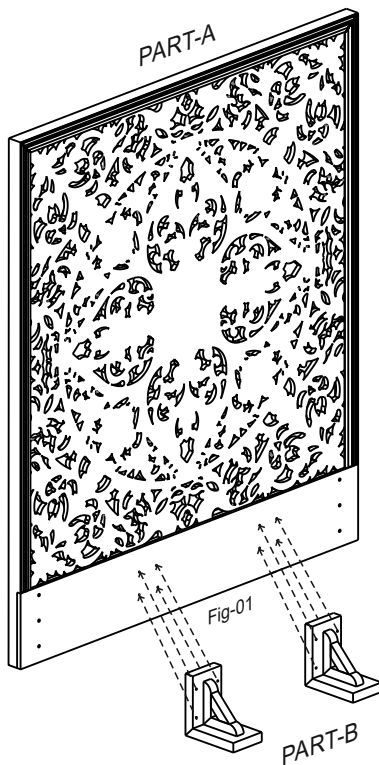

ASSEMBLY INSTRUCTIONS

- Headboard must be assembled by at least two people.
 - Please read instructions carefully before assembling headboard.
 - Use the above parts and hardware list to identify each component.
 - Keep all packing materials until assembly is complete to avoid loss of smaller parts.
1. Stand the Headboard (A) upright and attach the headboard foot (B), then tighten the screw with the help of screwdriver as per shown in Fig no.- 1 & 2.
 2. Repeat above procedure to attach the 2nd foot.
 3. Headboard Assembly completed. Fig-03

RHTEEN

ANAYA FULL BED INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

- Stand the Headboard (A) upright and attach the Side Rail (C), then screw the Allen Head Bolt (3) into the pre-buried holes on Headboard (A), tighten with Allen Key (2), as shown in Fig-04.
- Repeat above procedure to attach the Footboard (D), then tighten all Allen Head Bolts (3) with Allen Key (2), as shown in Fig-05.
- Attach the 8 Slat Foot (F) to the Slat Roll (E), as shown in Fig-06.
- Screw the Slat Roll (E) on the top of the Side Rail's side slats with Screw (4), as shown in Fig-07.

