

RONSON UPHOLSTERED PARSONS BED FULL & QUEEN - ASSEMBLY INSTRUCTIONS

PARTS INCLUDED

A.HEADBOARD (1)

B.SIDE RAILS (2)

C.FOOTBOARD (1)

D.SLATS (4)

E.PLATFORMS (2)

F.CENTER FOOT (WITH ADJUSTABLE GLIDE) (4)

NO	HARDWARE ENCLOSED		QTY
1	<u>L</u>	Allen Key (0.5cm)	1pc.
2	(g)	Allen-Head bolts (0.8cm Diam.)	12 pcs.
3	<u> </u>	Screws (4cm)	8 pcs.
4)	Screws (3cm)	16 pcs.

TOOLS NEEDED

Phillips-Head Screwdriver (not included)



ASSEMBLY INSTRUCTIONS

Bed must be assembled by at least two people.

Please read instructions carefully before assembling bed.

Use the above parts and hardware list to identify each component.

Keep all packing materials until assembly is complete to avoid loss of smaller parts.

- 1. Screw the Allen Head Bolt (2) to the Headboard (A), then stand the Headboard (A) upright and attach Side Rails (B), as shown in Diagram I.
- 2. Repeat above procedure to attach the Footboard (C), then tighten all Allen Head Bolts (2) with Allen Key (1).
- 3. Attach the Center Foot (F) to the Slat (D), as shown in Diagram II.
- 4. Place the Slats (D) on the top of the Side Rail's side slats and fasten using Screw (3), as shown in Diagram III.
- 5. Lay the Platform Panel (E) on the top of the slats (D) then screw with screw (4), as shown in Diagram IV.

CARE INSTRUCTIONS

Spot clean only with a soft, damp cloth.

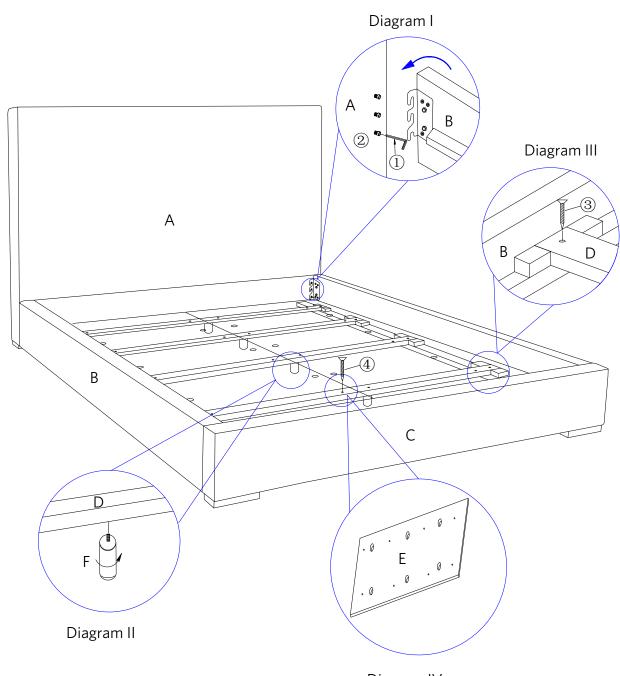


Diagram IV