










RHTEEN

SABINE UPHOLSTERED PLATFORM FULL & QUEEN BED

PARTS INCLUDED

- A [1] Headboard
- B [2] Side Rail
- C [1] Footboard
- D [4] Slat
- E [2] Platform Panel
- F [4] Center Support Slat Foot

NO	HARDWARE & PARTS ENCLOSED		QTY
1		Screw (4cm)	8 pcs
2		Allen Key	1 pcs
3		Allen Head Bolt(0.6cm Dia)	8 pcs
4		Thread Rod	4 pcs
5		Curved Washer	4 pcs
6		Lock Washer	4 pcs
7		Nut	4 pcs
8		Spanner Wrench	1 pcs
9		Screw(3cm)	16 pcs

TOOLS NEEDED

Phillips Screwdriver (not included)



ASSEMBLY INSTRUCTIONS

- Bed must be assembled by at least two people.
- Please read instructions carefully before assembling bed.
- Use the above parts and hardware list to identify each component.
- Keep all packing materials until assembly is complete to avoid loss of smaller parts.

1. Stand the Headboard (A) upright and attach Side Rails (B) to the Headboard (A) by using Thread Rod (4), Curved washer (5), Lock Washer (6), Nut (7) and Spanner Wrench (8), as shown in Diagram I.
2. Lock the Footboard (C) to the Side Rail (B), then tighten it by using Allen Key (2) and Allen Head bolt (3), as shown in Diagram II.
3. Attach the Center Support Slat foot (F) to the Slat (D) as shown in Diagram III.
4. Place the Slats (D) on the top of the Side Rail's side slats and fasten using Screw (4), as shown in Diagram IV.
5. Lay the Platform Panel (E) on the top of the Slats (D) then tighten the Screw (9), as shown in Diagram V.

CARE INSTRUCTIONS

1. Spot clean only with a soft, damp cloth.
2. Do not use abrasive cleanser.

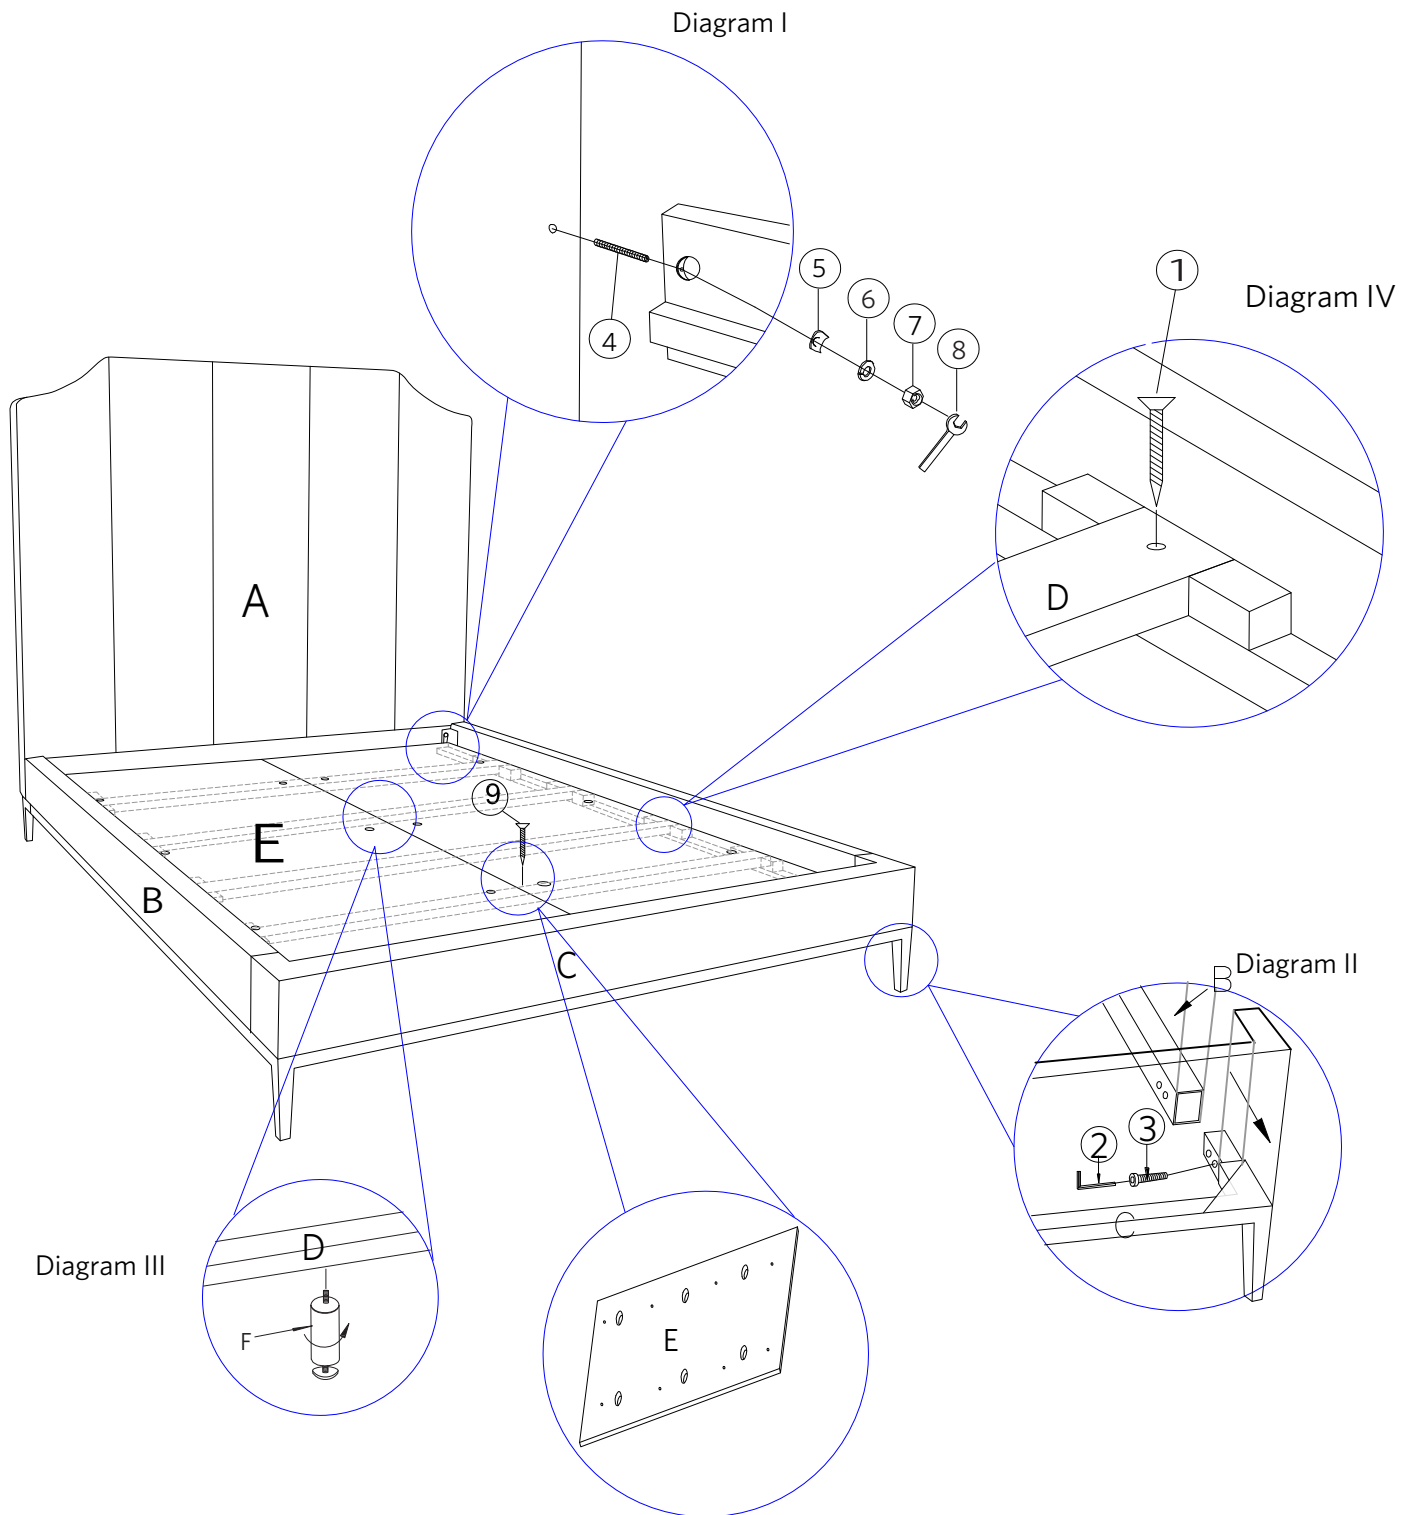


Diagram V